

DYNASYS QUIET MUFFLER TAILPIPE INSTALLATION GUIDE

Re:

Installation of tailpipe on new quiet muffler equipped APU.


Parts Listing:

The Dynasys Quiet Muffler Tailpipe Install Kit contains the following parts:

Reference Number	No.	Description	Quantity
1	54-8062	Tailpipe, Flexible 1.5" x 5-ft	1
2	54-8107	Clamp, 1.5" dia., 5/16" thread	2
3	54-8096	Hanger, Muffler	1
4	54-8095	Hanger Bracket	1
5	54-8316	Bolt, HHB 5/16" x .75"	2
6	54-8366	Bolt, HHB 5/16" x 1.25"	1
7	54-8309	Washer, 5/16" Flat	4
8	54-8310	Nut, 5/16" Nylock	3

Installation Procedures:

1. Use muffler clamp [ref. 2] and fix flexible tailpipe [ref. 1] onto muffler.


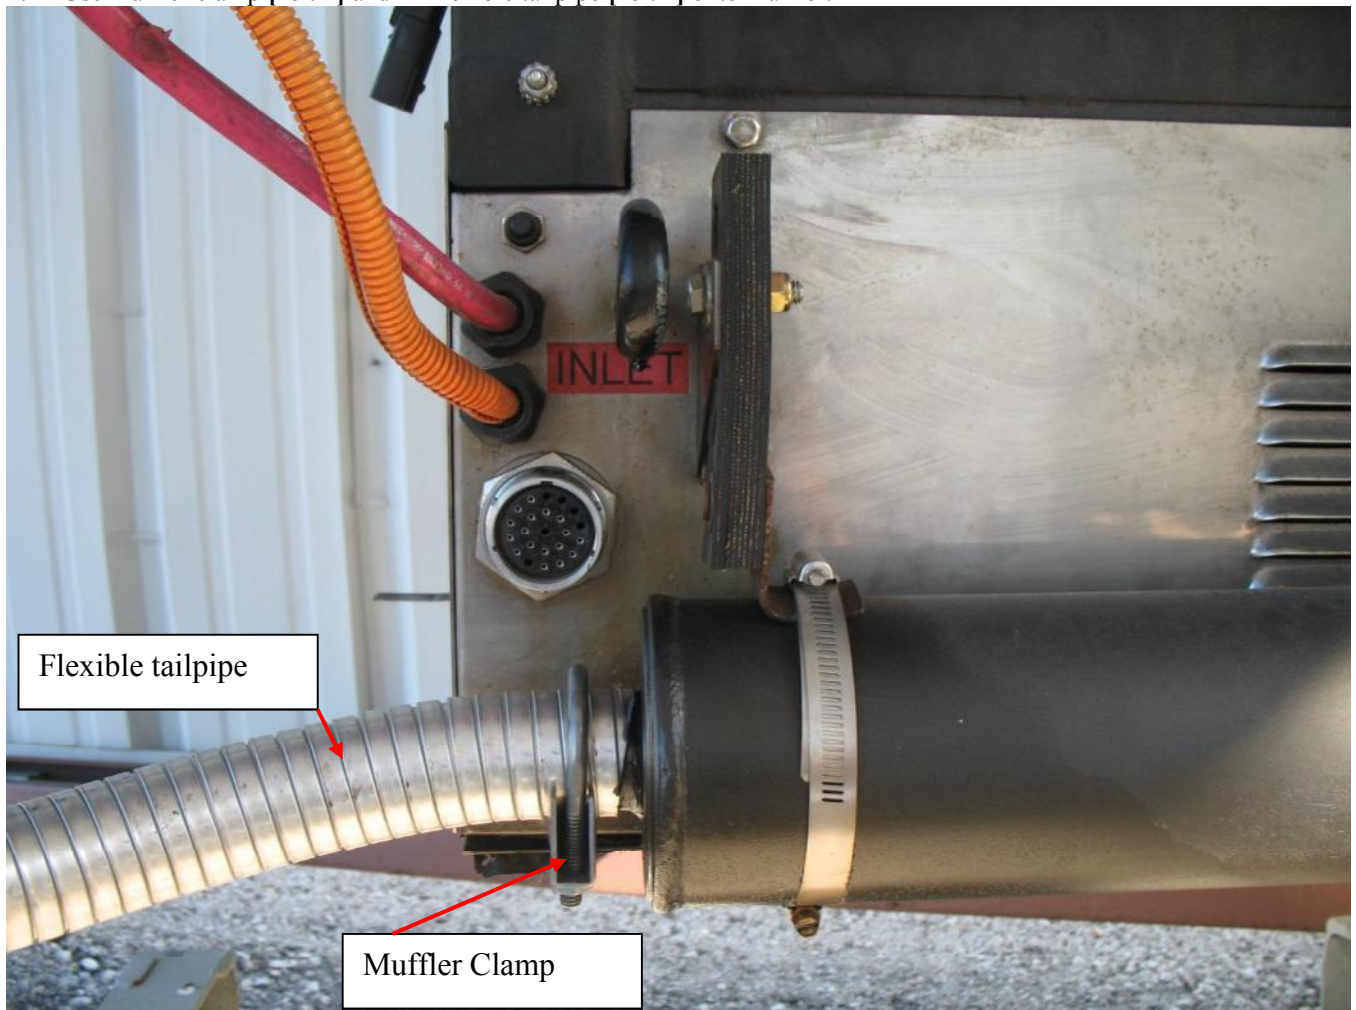


2. Select location for flexible tailpipe end to be installed. Flexible tailpipe can be trimmed to each application.

A) Find a suitable place on the truck to affix Hanger Bracket [ref. 4] using (2) 5/16" x 0.75" HHB bolt [ref. 5], (2) 5/16" flat washer [ref. 7], and (2) 5/16" nylock nut [ref. 8].

B) Use (1) 5/16" x 1.25" HHB bolt [ref. 6], (2) 5/16" flat washer [ref. 7], and 5/16" nylock nut [ref. 8], to fix hanger [ref.3], to hanger bracket.

C) Use clamp [ref. 2], to fix flex pipe to hanger.

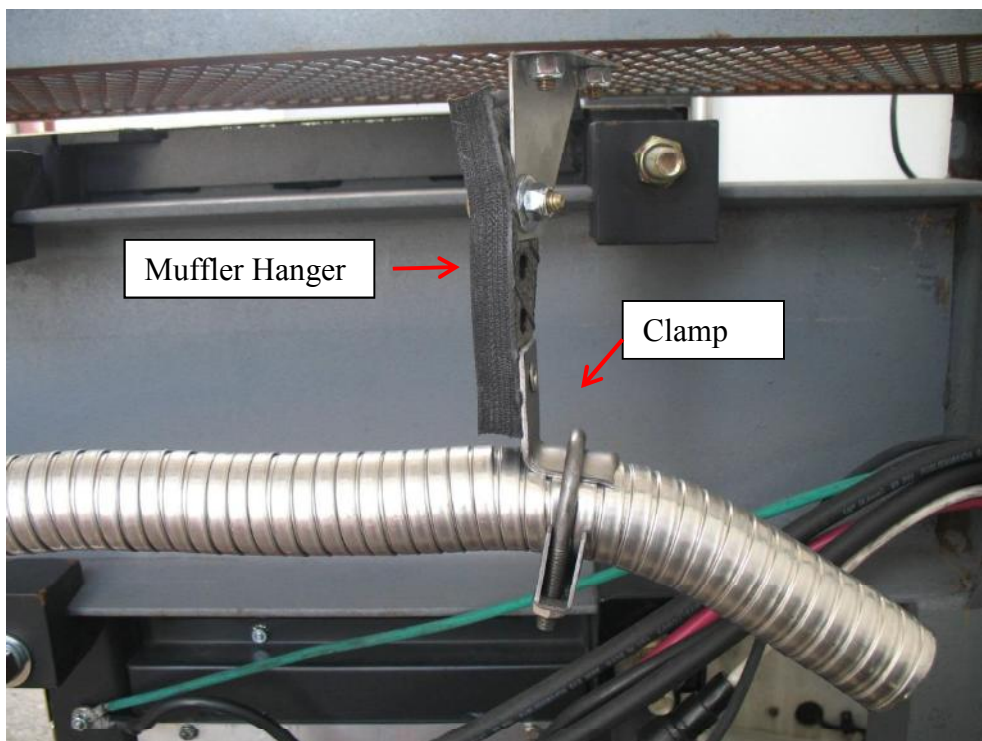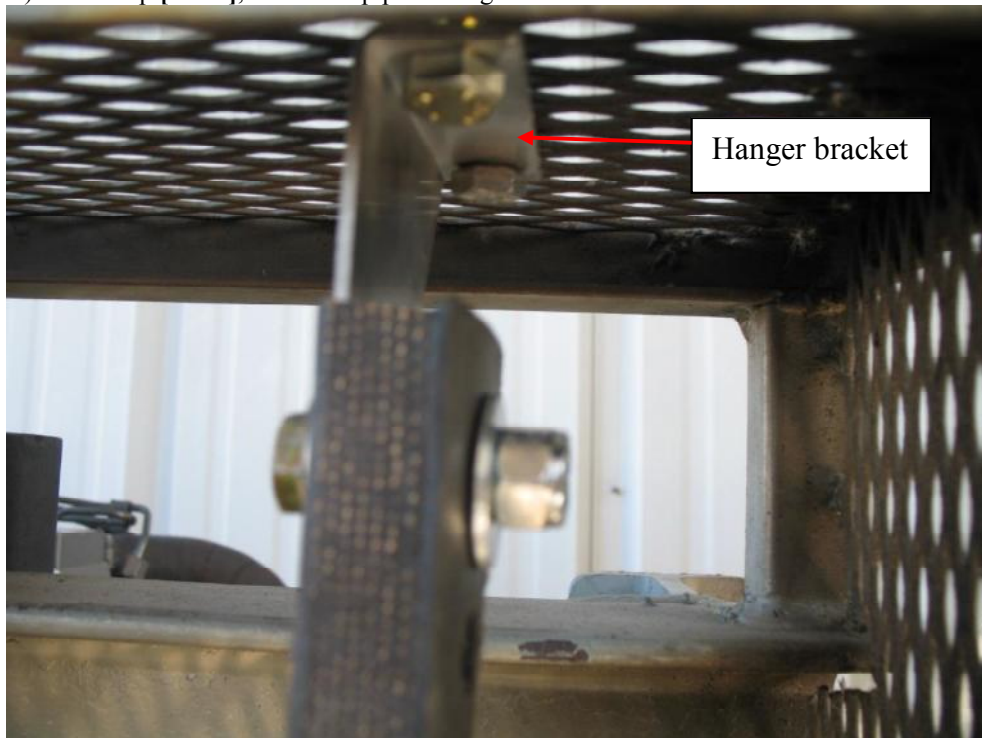

3. After assembly, the Quiet Muffler should look like the following figure:

*****Note: Tailpipe Tip should face downward slightly.**
Leaving tailpipe facing up could lead to water collection and engine damage.

